

TBEA



PV Grid-Connected Inverter

User Manual

TS25KTL-A20 / TS27KTL-A20 / TS30KTL-A20 / TS33KTL-A20 /
TS36KTL-A20 / TS40KTL-A20

Prepared by:	Lv pengfei	Date:	6 th June. 2024
Review by:	Li gang	Date:	6 th June. 2024
Approved by:	Hao xiaobo	Date:	6 th June. 2024

Revised Content

Date	Version	Revised content	Designer
6 th June. 2024	1.0.0	First version	Lv pengfei
5 th June. 2025	1.0.1	10.1 DC input NOTE	Lv pengfei
9 th July. 2025	1.0.2	5.5.1 Requirements for the DC connection	Lv pengfei

TS25-40KTL-A20 series inverter Table of Contents

1 Notes on this Manual..... 1

 1.1 General Notes 1

 1.2 Area of Validity 1

 1.3 Target group 1

 1.4 Symbols used in this manual 2

2 Safety 3

 2.1 Intended use 3

 2.2 Important safety information 3

 2.3 Symbols on the label 5

3 Unpacking 6

 3.1 Scope of delivery 6

 3.2 Check for transport damage 6

4 Mounting 7

 4.1 Requirements for mounting 7

 4.2 Mounting the inverter 10

5 Electrical connection 13

 5.1 Safety 13

 5.2 Electrical Connection Panel 14

 5.3 Electrical connection diagram with a separate DC isolator 14

 5.4 AC Connection 15

 5.4.1 Conditions for the AC connection 15

 5.4.2 Grid connection 17

 5.4.3 Additional grounding connection 19

5.5 DC connection	20
5.5.1 Requirements for the DC connetion	20
5.5.2 Assembling the DC connectors	21
5.5.3 Disassembling the DC connectors	22
5.5.4 Connecting the PV Array	24
5.6 Communication equipment connection	25
5.6.1 COM1: Connecting the WiFi stick	25
5.6.2 COM2&COM3: RS485 connection (Non-independent dual 485 interface)	27
5.6.3 COM4&COM5: Connection of Ripple control receiver /NS protection device	28
6 Communication	30
6.1 System monitoring via WLAN or 4G	30
6.2 Active power control with Smart meter	31
6.3 Remote firmware update	31
6.4 Active power control via demand response enabling device (DRED)	32
6.5 Communication with the third party device	32
7 Commissioning	33
7.1 Electrical check	33
7.2 Mechanical check	33
7.3 Safety code check	34
7.4 Start-up	34
8 Display	35
8.1 Overview of the control panel	35
8.2 LED indicators	35
9 Disconnecting the inverter from voltage sources	36
10 Technical data	37
10.1 DC input data	37

10.2 AC output data 38

10.4 Safety regulations 42

10.5 Tools and torque 43

11 Troubleshooting 44

12 Maintenance 47

 12.1 Cleaning the contacts of the DC-switch 47

 12.2 Cleaning the heat sink 47

13 Recycling and disposal 48

14 EU Declaration of Conformity 48

15 Warranty 48

16 Contact 49

1 Notes on this Manual

1.1 General Notes

TS25-40KTL-A20 series inverter is a three-phase transformerless string inverter with three independent MPPTs. It converts the direct current (DC) generated by the photovoltaic (PV) module into a three-phase alternating current (AC) and feeds it into the utility grid.

1.2 Area of Validity

This manual describes the mounting, installation, commissioning and maintenance of the following inverters:

- TS25KTL-A20
- TS27KTL-A20
- TS30KTL-A20
- TS33KTL-A20
- TS36KTL-A20
- TS40KTL-A20

Please read this manual carefully before using this product, keep it in a convenient place and make it available at all times.

1.3 Target group

This document is for qualified electricians only, who must perform the tasks exactly as described.

All persons installing inverters must be trained and experienced in general safety which must be observed when working on electrical equipment. Installation personnel should also be familiar with local requirements, rules and regulations.

Qualified persons must have the following skills:

- Knowledge of how an inverter works and is operated
- Training in how to deal with the dangers and risks associated with installing, repairing and using electrical devices and installations
- Training in the installation and commissioning of electrical devices and installations
- Knowledge of the applicable laws, standards and directives
- Knowledge of and compliance with this document and all safety information.

1.4 Symbols used in this manual

Safety instructions will be highlighted with the following symbols:



DANGER indicates a hazardous situation which, if not be avoided, will result in death or serious injury.



WARNING indicates a hazardous situation which, if not be avoided, can result in death or serious injury.



CAUTION indicates a hazardous situation which, if not be avoided, can result in minor or moderate injury.



NOTICE indicates a situation which, if not be avoided, can result in property damage.



INFORMATION that is important for a specific topic or goal, but is not safety-relevant.

2 Safety

2.1 Intended use

1. TS25-40KTL-A20 series inverter converts the direct current from the PV arrays into grid-compliant alternating current.
2. TS25-40KTL-A20 series inverter is suitable for indoor and outdoor use.
3. TS25-40KTL-A20 series inverter must only be operated with PV arrays (PV modules and cabling) of protection class II in accordance with IEC 61730, application class A. Do not connect any sources of energy other than PV modules to TS25-40KTL-A20 series inverter.
4. PV modules with a high capacity to ground must only be used if their coupling capacity does not exceed 5.0 μ F.
5. When the PV modules are exposed to light, a DC voltage is supplied to this inverter.
6. When designing the PV power plants, ensure that the values comply with the permitted operating range of all components at all time.
7. The product must only be used in countries for which it is approved or released by TEBA and the grid operator.
8. Use this product only in accordance with the information provided in this documentation and with the locally applicable standards and directives. Any other application may cause personal injury or property damage.
9. The type label must remain permanently attached to the product.

2.2 Important safety information

DANGER

Danger to life due to electric shock when live components or cables are touched

- All work on the inverter must only be carried out by qualified personnel who have read and fully understood all safety information contained in this manual.
- Do not open the inverter.
- Children must be supervised to ensure that they do not play with the inverter.

DANGER

Danger to life due to high voltages of the PV array

When exposed to sunlight, the PV array generates dangerous DC voltage which is present in the DC conductors and the live components of the inverter. Touching the DC conductors or the live components can lead to lethal electric shocks. If you disconnect the DC connectors from the inverter under load, an electric arc may occur leading to electric shock and burns.

- Do not touch non-insulated cable ends.
- Do not touch the DC conductors.
- Do not touch any live components of the inverter.
- Have the inverter mounted, installed and commissioned only by qualified persons with the appropriate skills.
- If an error occurs, have it rectified by qualified persons only.
- Prior to performing any work on the inverter, disconnect it from all voltage sources as described in this document (see Section 9 "Disconnecting the Inverter from Voltage Sources").

WARNING

Risk of injury due to electric shock

Touching an ungrounded PV module or array frame can cause a lethal electric shock.

- connect and ground the PV modules, array frame and electrically conductive surfaces so that there is continuous conduction.

CAUTION

Risk of burns due to hot enclosure parts

Some parts of the enclosure can get hot during operation.

- During operation, do not touch any parts other than the enclosure lid of the inverter.










NOTICE

Damage to the inverter due to electrostatic discharge

Internal components of the inverter can be irreparably damaged by electrostatic discharge.

- Ground yourself before touching any component.


2.3 Symbols on the label

Symbol	Explanation
	Beware of a danger zone This symbol indicates that the inverter must be additionally grounded if additional grounding or equipotential bonding is required at the installation site.
	Beware of high voltage and operating current The inverter operates at high voltage and current. Work on the inverter must only be carried out by skilled and authorized electricians.
	Beware of hot surfaces The inverter can get hot during operation. Avoid contact during operation.
	WEEE designation Do not dispose of the inverter together with the household waste but in accordance with the disposal regulations for electronic waste applicable at the installation site.
	CE marking The product complies with the requirements of the applicable EU directives.
	Certification mark The product has been tested by TUV and got the quality certification mark.
	RCM Mark The product complies with the requirements of the applicable Australian standards.
	Capacitors discharge Before opening the covers, the inverter must be disconnected from the grid and PV array. Wait at least 5 minutes to allow the energy storage capacitors to fully discharge.
	Observe the documentation Observe all documentation supplied with the product

3 Unpacking

3.1 Scope of delivery

Check the scope of delivery for completeness and any visible external damage. Contact your supplier if the scope of delivery is incomplete or damaged.

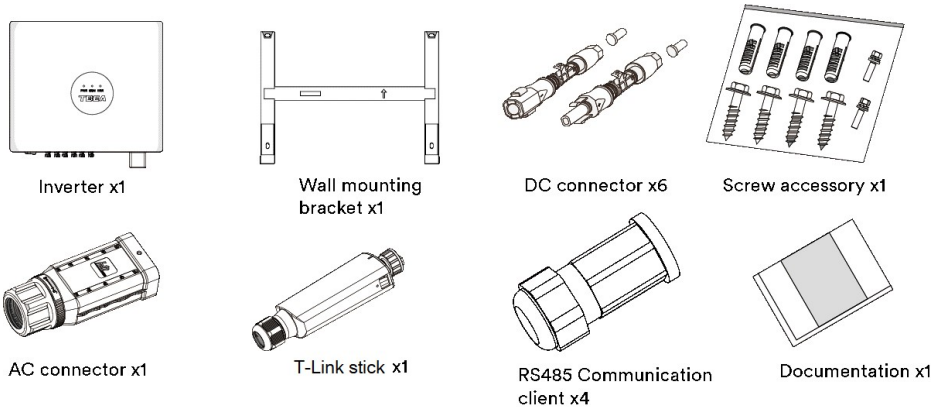

3.2 Check for transport damage

Thoroughly inspect the packaging upon delivery. If you detect any damage to the packaging which indicates the inverter may have been damaged, inform the responsible shipping company immediately.

We will be glad to assist you if required.

4 Mounting

4.1 Requirements for mounting


DANGER

Danger to life due to fire or explosion

Despite careful construction, electrical devices can cause fires.


- Do not mount the inverter on flammable construction materials.
- Do not mount the inverter in areas where flammable materials are stored.
- Do not mount the inverter in areas where there is a risk of explosion.

1. Be sure that the inverter is mounted out of the reach of children.
2. Mount the inverter in areas where it cannot be touched inadvertently.
3. Ensure good access to the inverter for installation and possible service.
4. The ambient temperature should be below 40°C to ensure optimal operation.
5. Observe the minimum clearances to walls, other inverters, or objects as follows to ensure sufficient heat dissipation.

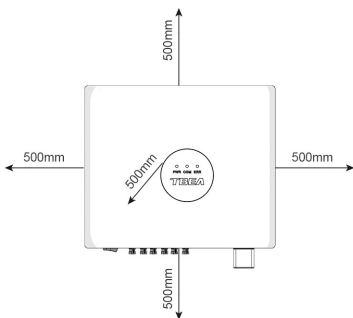


Direction	Min. clearance (mm)
above	500
below	500
sides	500

Clearances for one inverter

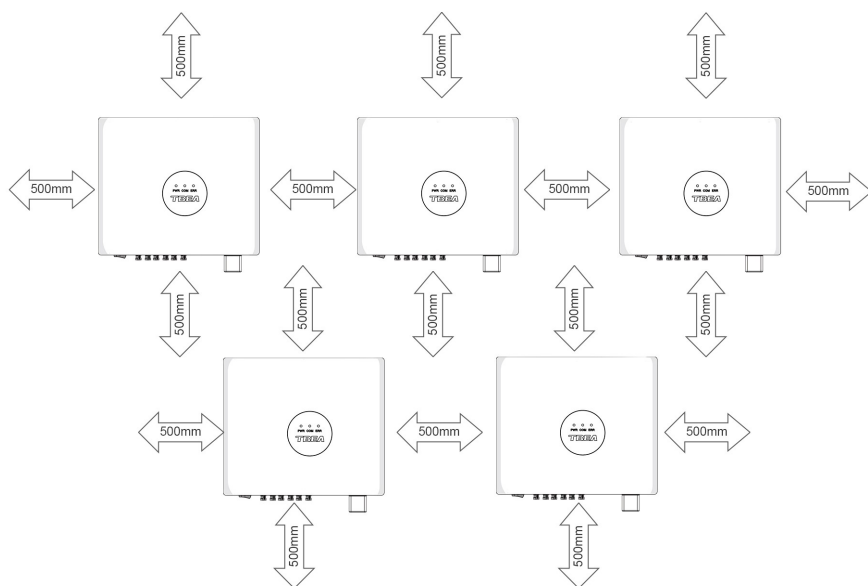


Clearances for multiple inverters


1. In order to avoid power reduction caused by overheating, do not mount the inverter in a location that allows long-term exposure to direct sunlight.
2. Ensure optimum operation and extend service life, avoid exposing the inverter to direct sunlight, rain and snow.

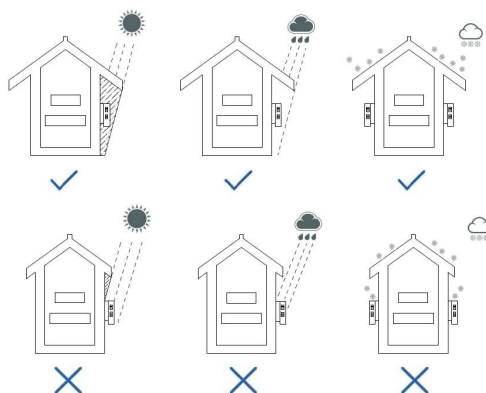

3. The mounting method, location and surface must be suitable for the inverter's weight and dimensions.
4. If mounted in a residential area, we recommend mounting the inverter on a solid surface.
Plasterboard and similar materials are not recommended due to audible vibrations when in use.
5. Don't put any objects on the inverter. Do not cover the inverter.
6. Mount the inverter vertically or tilted backward by max.15°.

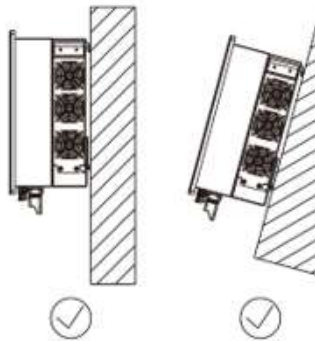

7. Never install the inverter horizontally, or with a forward tilt or with a backward tilt or even with upside down. The horizontal installation can result in damage to the inverter.

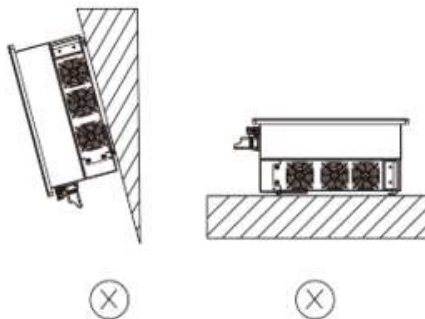

8. Mount the inverter at eye level for easy inspection.

4.2 Mounting the inverter

CAUTION

Risk of injury when lifting the inverter, or if it is dropped

The weight of TBEA inverter is max. 32 kg. There is risk of injury if the inverter is lifted incorrectly or dropped while being transported or when attaching it to or removing it from the wall bracket.

- Transport and lift the inverter carefully.

Mounting procedure:


CAUTION

Risk of injury due to damaged cables

There may be power cables or other supply lines (e.g. gas or water) routed in the wall.

- Ensure that no lines are laid in the wall which could be damaged when drilling holes.

1. Use a $\Phi 10\text{mm}$ bit to drill 4 holes at a depth of about 70mm according to the location of the wall mounting bracket

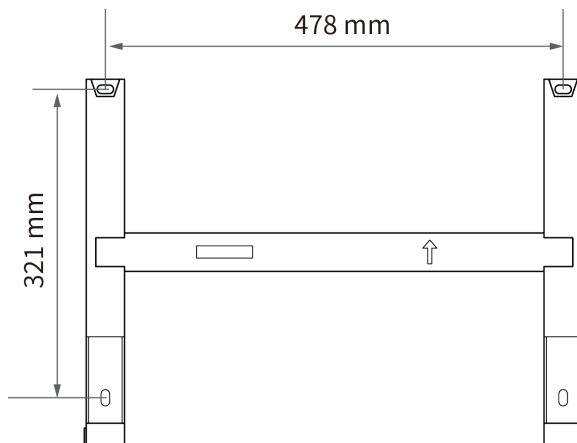


CAUTION

Risk of injury due to the product falls down


If the depth and distance of the holes is not correct, the product maybe fall down from the wall.

- Before inserting the wall anchors, measure the depth and distance of the holes.


2. Insert four wall plugs into the wall and fix the mounting bracket to the wall by inserting three Screws (SW10).

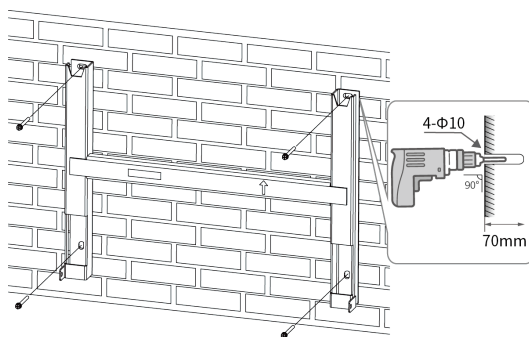

3. Hang the slot on the back of the inverter to the hook on the top of the mounting bracket.

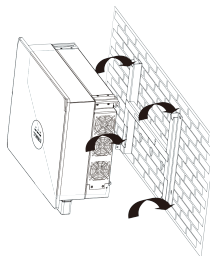

3. Secure the inverter to the mounting bracket on both sides using two M5 screws. Screwdriver type:PH2, torque:2.5Nm.

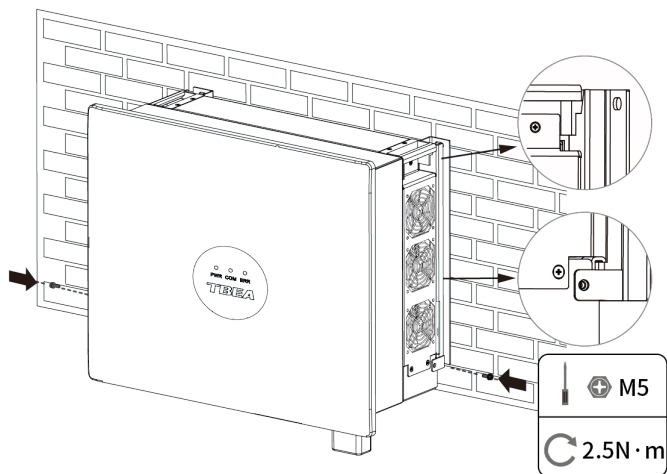

Dismantle the inverter in reverse order.

5 Electrical connection

5.1 Safety



DANGER

Danger to life due to high voltages of the PV array

When exposed to sunlight, the PV array generates dangerous DC voltage which is present in the DC conductors and the live components of the inverter. Touching the DC conductors or the live components can lead to lethal electric shocks. If you disconnect the DC connectors from the inverter under load, an electric arc may occur leading to electric shock and burns.

- Do not touch non-insulated cable ends.
- Do not touch the DC conductors.
- Do not touch any live components of the inverter.
- Have the inverter mounted, installed and commissioned only by qualified persons with the appropriate skills.
- If an error occurs, have it rectified by qualified persons only.
- Prior to performing any work on the inverter, disconnect it from all voltage sources as described in chapter 9.




WARNING

Risk of injury due to electric shock

Touching an ungrounded PV module or array frame can cause a lethal electric shock.


- connect and ground the PV modules, array frame and electrically conductive surfaces so that there is continuous conduction.

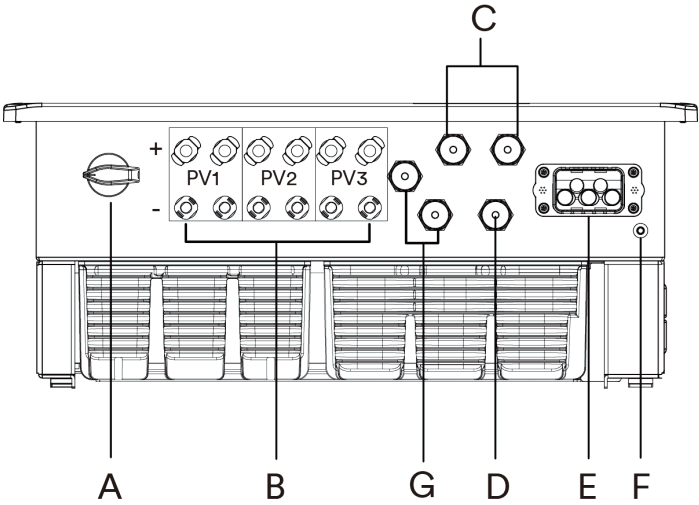

Object	Description
A	DC-switch
B	DC connector for PV generator
C	COM2&3: RS485 connection
D	COM1: Connection for WiFi stick
E	AC connection socket
F	Additional grounding
G	COM4&5: Optional connection of Ripple control receiver / NS protection device

5.3 Electrical connection diagram with a separate DC isolator

Local standards or codes may require that a separate DC isolator should be installed next to the inverter. The separate DC isolator must disconnect each PV string of the inverter so that the entire inverter can be removed if the inverter is faulty. We recommend the following electrical connection:

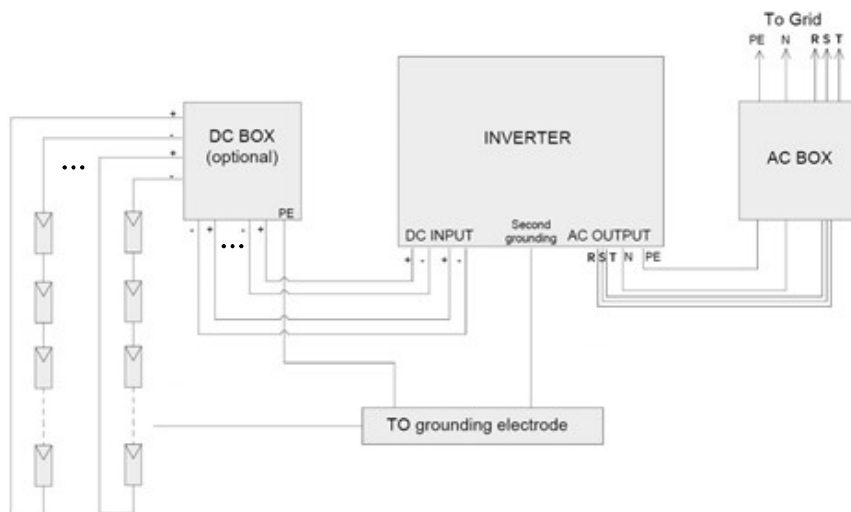


5.4 AC Connection

5.4.1 Conditions for the AC connection

Cable Requirements

The grid connection is made using 5 conductors (L1, L2, L3, N, and PE). We recommend the following requirements for stranded copper conductor.

1. YJV or YJVR copper cable is recommended.
2. If using aluminum wire, please contact our service department.

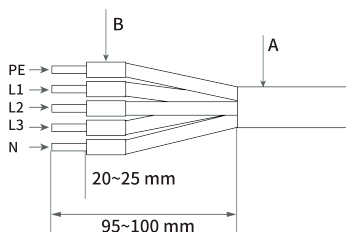

Object	Description	Value
A	External diameter	20...36 mm
B	Copper Conductor cross-section	10...25 mm ²

Note: If use aluminum conductor please connect our service department.

Cable Design

The conductor cross-section should be dimensioned to avoid power loss in cables exceeding 1% of rated output power.

The required conductor cross-section depends on the inverter rating, ambient temperature, routing method, cable type, cable losses, valid installation requirements of installation side.

Residual current protection

The product is equipped with an integrated universal current-sensitive residual current monitoring unit inside. The inverter will disconnect immediately from the mains power as soon as fault current with a value exceeding the limit.



If an external residual-current protection device is required, please install a type B residual-current protection device with a protection limit of not less than 300mA.

Overvoltage category

The inverter can be used in grids of overvoltage category III or lower in accordance with IEC 60664-1. This means that it can be permanently connected at the grid-connection point in a building. In installations involving long outdoor cable routing, additional measures to reduce overvoltage category IV to overvoltage category III are required.

AC circuit breaker

In PV systems with multiple inverters, protect each inverter with a separate circuit breaker. This will prevent residual voltage being present at the corresponding cable after disconnection.

No consumer load should be applied between AC circuit breaker and the inverter.

The selection of the AC circuit breaker rating depends on the wiring design (wire cross-section area), cable type, wiring method, ambient temperature, inverter current rating, etc. Derating of the AC circuit breaker rating may be necessary due to self-heating or if exposed to heat.

The maximum output current and the maximum output overcurrent protection of the inverters can be found in section 10 "Technical data".

Grounding conductor monitoring

The inverter is equipped with a grounding conductor monitoring device. This grounding conductor monitoring device detects when there is no grounding conductor connected and disconnects the inverter from the utility grid if this is the case. Depending on the installation site and grid configuration, it may be advisable to deactivate the grounding conductor monitoring. This is necessary, for example, in an IT system if there is no neutral conductor present and you intend to install the inverter between two line conductors. If you are uncertain about this, contact your grid operator or TEBA.



Safety in accordance with IEC 62109 when the grounding conductor monitoring is deactivated.

In order to guarantee safety in accordance with IEC 62109 when the grounding conductor monitoring is deactivated, carry out one of the following measures:

- Connect a copper-wire grounding conductor with a cross-section of at least 10 mm² to the AC connector bush insert.
- Connect an additional grounding that has at least the same cross-section as the connected grounding conductor to the AC connector bush insert. This prevents touch current in the event of the grounding conductor on the AC connector bush insert failing.

5.4.2 Grid connection

Procedure:



Danger to life due to high voltages in the inverter

Touching the live components can lead to lethal electric shocks.

- Before performing the electrical connection, ensure that the AC circuit-breaker is switched off and cannot be reactivated.

1. Switch off the AC circuit breaker and secure it against reconnection.
2. Insert the copper wire into a suitable terminal and crimp it.


NOTICE

Damage to the inverter due to wrong wiring


If the phase line was connected to PE terminal, the inverter will not function properly.

- Please ensure that the type of the conductors matches the signs of the terminals on the socket element.


3. Thread the stripped wire into the lock nut and the main body in turn (the flexible wire needs to be riveted to the insulated terminal). Insert the cable into the rubber core according to the line sequence, make the insulating terminal flush with the rubber core surface, and the torque of the crimping screwdriver is $5.0 \pm 0.1\text{N} \cdot \text{m}$

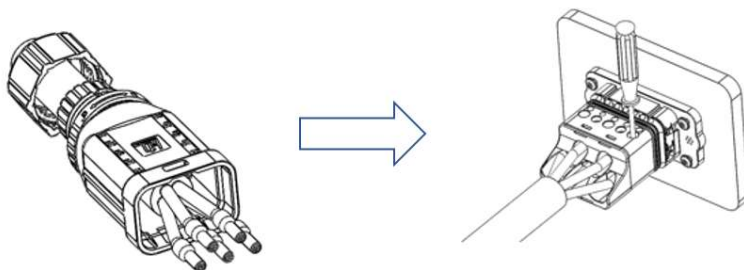

4. Insert the main body into the rubber core and hear the "click" sound.

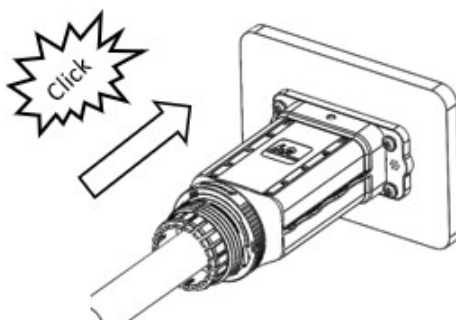

5. Tighten the nut with an open-ended wrench and complete the installation with a "click, click, click", then complete the installation.

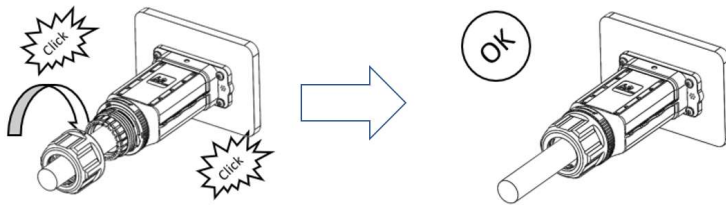


5.4.3 Additional grounding connection

If additional grounding or equipotential bonding is required locally, you can connect additional grounding to the inverter. This prevents touch current if the grounding conductor on the AC connector fails.

Procedure:

1. Align the terminal lug with protective conductor.
2. Insert the screw through the hole located at the housing and tighten it firmly (screw driver type: PH2, torque: 2.5Nm).

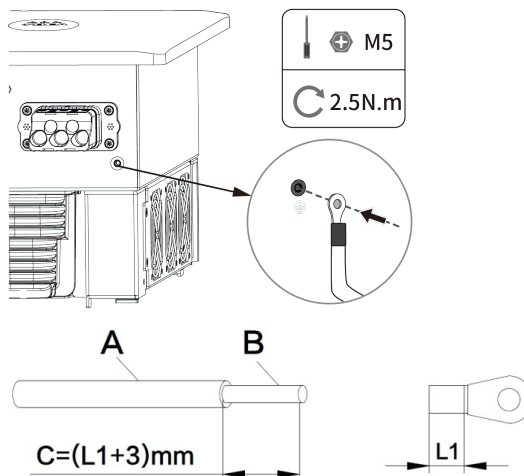

Grounding parts information :

Object	Explanation
1	M5 screw
2	M5 OT terminal
3	Yellow-green grounding wire

5.5 DC connection



Danger to life due to high voltages in the inverter

Touching the live components can lead to lethal electric shocks.

- Before connecting the PV generator, ensure that the DC-switch is switched off and that it cannot be reactivated.
- Do not disconnect the DC connectors under load.

5.5.1 Requirements for the DC connection

Requirements for the PV modules of a string:

1. PV modules of the connected string must be the same type, Identical alignment and Identical tilt.
2. The thresholds for the input voltage and the input current of the inverter must be adhered to (see Section 10.1 "Technical DC input data").
3. On the coldest day based on statistical records, the open-circuit voltage of the PV array must never exceed the maximum input voltage of the inverter.
4. The connection cables of the PV modules must be provided with the connectors
5. The positive connection cables of the PV modules must be fitted with the positive DC connectors.
The negative connection cables of the PV modules must be provided with the negative DC connectors.
6. To ensure the optimal power generation of the system, the voltage difference between different MPPT circuits shall be less than 200V.




DANGER

Danger to life due to high voltages on DC conductors

When exposed to sunlight, the PV array generates dangerous DC voltage which is present in the DC conductors. Touching the DC conductors can lead to lethal electric shocks.

- Cover the PV modules.
- Do not touch the DC conductors.

Assemble the DC connectors as described below. Be sure to observe the correct polarity. The DC connectors are marked with the symbols "+" and "-".

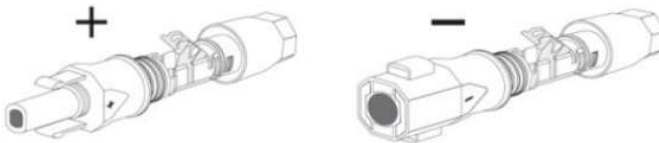


Cable requirements:

The cable must be of type PV1-F, UL-ZKLA or USE2 and comply with the following properties:


1. External diameter: 5-8mm
2. Conductor cross-section: 2.5-6mm²
3. Qty single wires: minimum 7
4. Nominal voltage: minimum 1100V

Procedure:


1. Strip about 12 mm of the cable insulation.

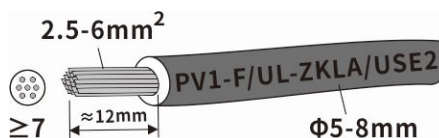

2. Route the stripped cable all the way into the DC connector. Ensure that the stripped cable and the DC connector have the same polarity.

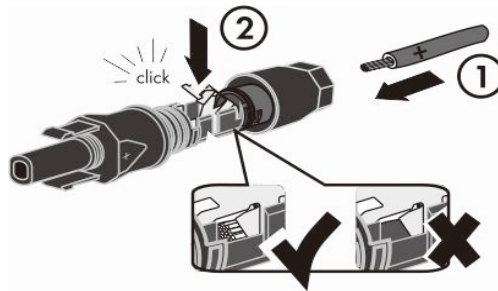

3. Push the swivel nut up to the thread and tighten the swivel nut. (SW15, Torque: 2.0Nm)

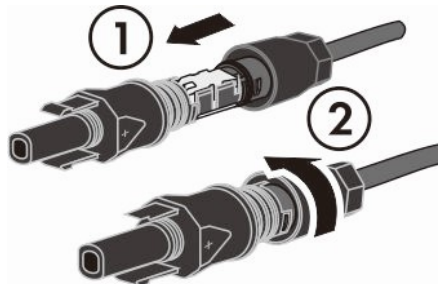

5.5.3 Disassembling the DC connectors

DANGER

Danger to life due to high voltages on DC conductors

When exposed to sunlight, the PV array generates dangerous DC voltage which is present in the DC conductors. Touching the DC conductors can lead to lethal electric shocks.


- Cover the PV modules.
- Do not touch the DC conductors.

Procedure:


1. Make sure DC power is cut off.
2. Unscrew the swivel nut.



3. To release the DC connector, insert a flat-blade screwdriver (blade width: 3.5 mm) into the side catch mechanism and lever open.

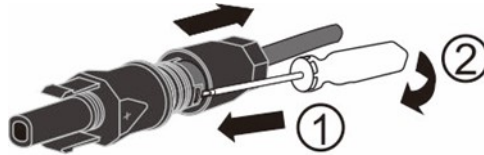

4. Carefully pull the DC connector apart.
5. Release the clamping bracket. To do so, insert a flat-blade screwdriver (blade width: 3.5 mm) into the clamping bracket and lever it open.

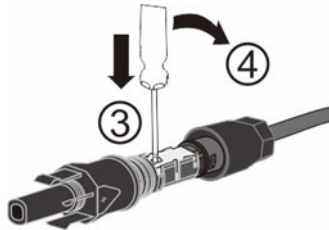

6. Remove the cable.



NOTICE


Destruction of the inverter due to overvoltage

If the voltage of the strings exceeds the maximum DC input voltage of the inverter, it can be destroyed due to overvoltage. All warranty claims become void.

- Do not connect strings with an open-circuit voltage greater than the maximum DC input voltage of the inverter.
- Check the design of the PV system

Procedure:

1. Ensure that the individual AC circuit breaker is switched off and secure it against reconnection.
2. Ensure that the DC-switch is switched off and secure it against reconnection.
3. Ensure that there is no ground fault in the PV strings.
4. Check whether the DC connector has the correct polarity. If the DC connector fits with a DC cable having the wrong polarity, the DC connector must be reassembled again. The DC cable must always have the same polarity as the DC connector.
5. Ensure that the open-circuit voltage of the PV strings does not exceed the maximum DC input voltage of the inverter.
6. Unplug the sealing plug on the input end of the DC connector and connect the assembled DC connectors to the inverter until they audibly snap into place. Do not unplug the sealing plug from the input end of unused DC connector.

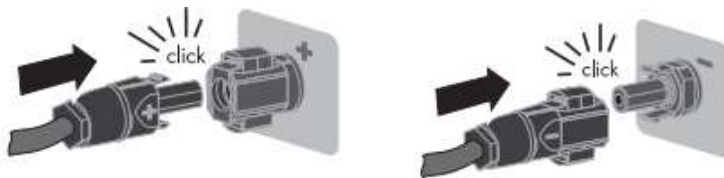

NOTICE

Damage to the inverter due to moisture and dust penetration

Seal the unused DC inputs with sealing plugs so that moisture and dust cannot penetrate the Inverter.

- Make sure all DC connectors are securely sealed.

5.6 Communication equipment connection

5.6.1 COM1: Connecting the WiFi stick

NOTICE


Damage to the inverter due to electrostatic discharge

Internal components of the inverter can be irreparably damaged by electrostatic discharge.


- Ground yourself before touching any component.

Procedure:


1. Take out the WiFi stick included in the scope of delivery.
2. Rotate the nut, take out the sealing ring, hold the locking structure, and take out the wiring terminal.

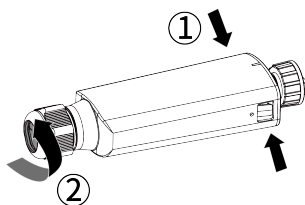




3. Lock the communication cable to the wiring terminal according to the sequence shown in the following figure.

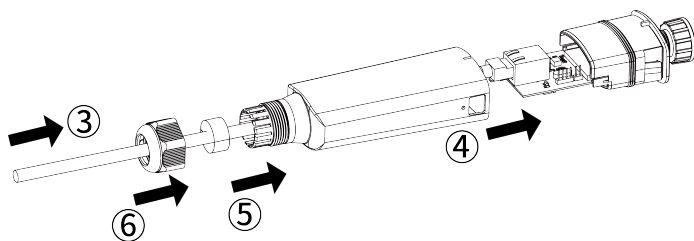

4. Insert the wiring terminal into the sealing head, adjust the communication cable, insert the sealing ring, and lock nut.

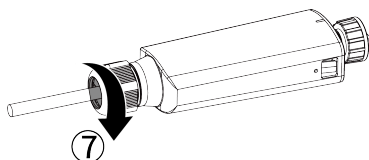

5. Remove the dust and waterproof cover of the WiFi stick on the inverter and retain it. Attach the WiFi stick to the connection port in place and tighten it into the port by hand with the nut in the stick. Make sure the stick is securely connected and the label on the modular can be seen.

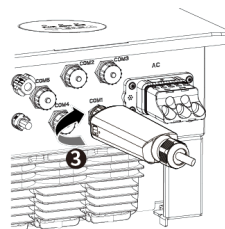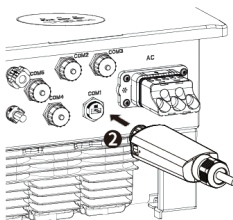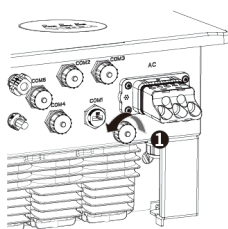


The communication stick interface COM1 is only applicable to TEBA products and can not be connected to any other USB devices.

NOTICE

The inverter can be destroyed by wrong communication wiring


- Internal components of the inverter can be irreparably damaged due to incorrect wiring between the power wire and signal wire. All the warranty claim will be invalid.
- Please check the wiring of the RJ45 connector before crimping the contact.

RJ45 cable pin assignment as below, strip the wire as shown in the figure, and crimp the copper wire to the appropriate OT terminal (according to DIN 46228-4, provided by the customer).

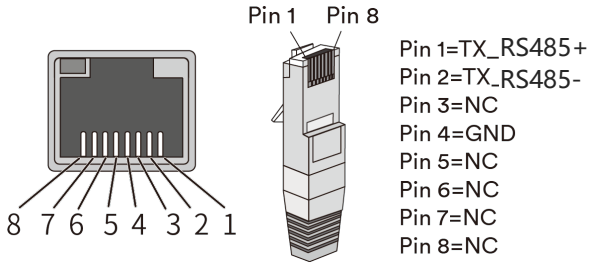

Procedure:

1. Unscrew the communication port (see COM2 or COM3) cover cap in the following arrow sequence and insert the network cable into the RS485 communication client attached.
2. Insert the network cable into the corresponding communication terminal of the machine according to the arrow sequence, tighten the thread sleeve, and then tighten the forcing nut at the tail.

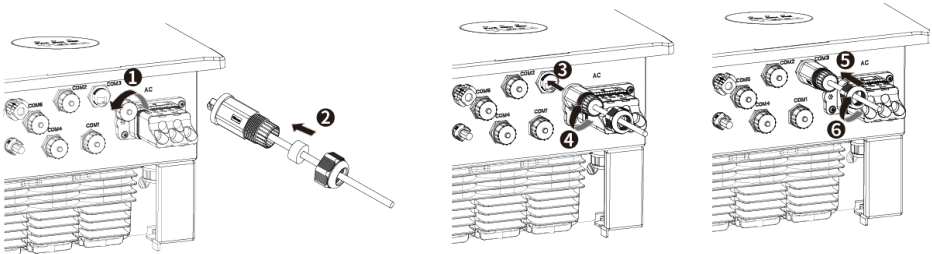

NOTICE


Damage to the inverter due to electrostatic discharge.
The inverter can be destroyed by wrong communication wiring.

- Internal components of the inverter can be irreparably damaged by electrostatic discharge.
- Internal components of the inverter can be irreparably damaged due to incorrect wiring.
- Ground yourself before touching any component.
- between the power wire and signal wire. All the warranty claim will be invalid.
- Please check the wiring of the RJ45 connector before crimping the contact.

NOTICE


If several inverters connect to one ripple control receiver, One of the RJ45 communication port of the first inverter connect to the ripple control receiver, the rest RJ45 communication port connect to the next inverter. The other inverters connect one by one through the straight through network cable.

RJ45 cable pin assignment as below, strip the wire as shown in the figure, and crimp the copper wire to the appropriate OT terminal (according to DIN 46228-4, provided by the customer).

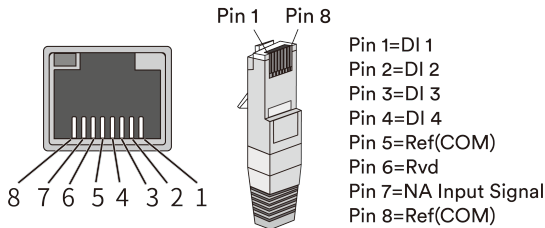


Procedure:


- Unscrew the communication port (see COM4 or COM5) cover cap in the following arrow sequence and insert the network cable into the RS485 communication client attached.
- Insert the network cable into the corresponding communication terminal of the machine according to the arrow sequence, tighten the thread sleeve, and then tighten the forcing nut at the tail.

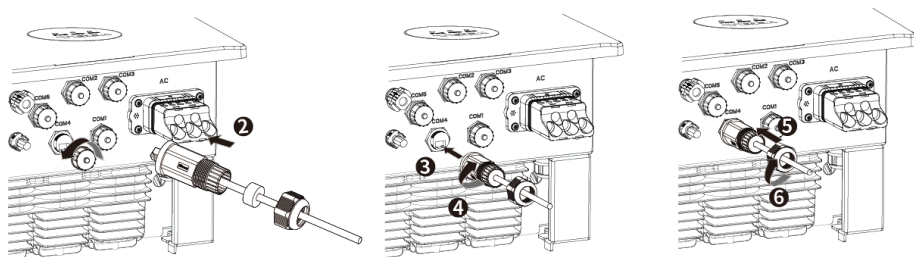

- Connect the network cable to NS protection device

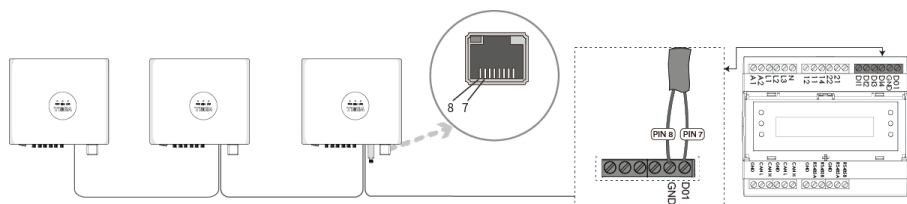


- Connect the network cable to ripple control receiver

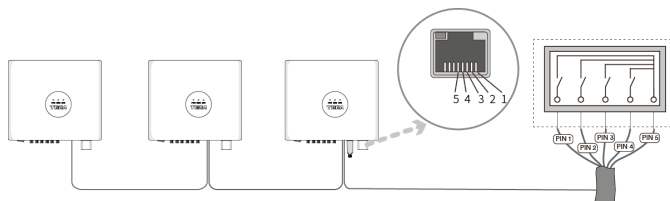


6 Communication

6.1 System monitoring via WLAN or 4G

User can monitor the inverter through the external 4G/WiFi stick module. The connection diagram between the inverter and internet is shown as following two pictures, both two methods are available. Please note that each 4G stick can only connect to 5 inverters in method1, and each WiFi stick can only connect to 10 inverters in method1.

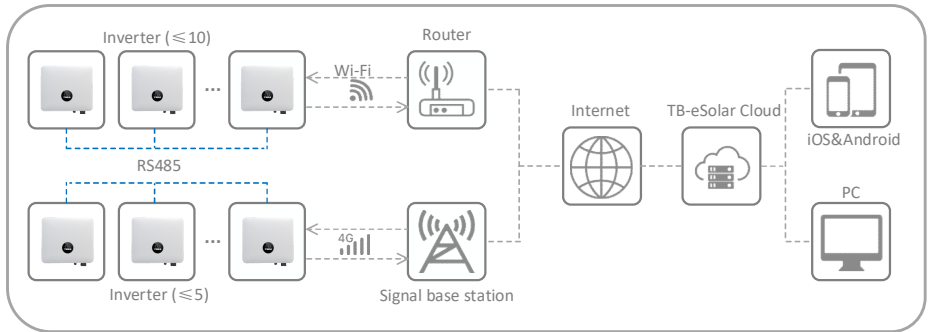

Method 1 only one inverter with the 4G/ WiFi stick, the other inverter be connected through the RS 485 cable.

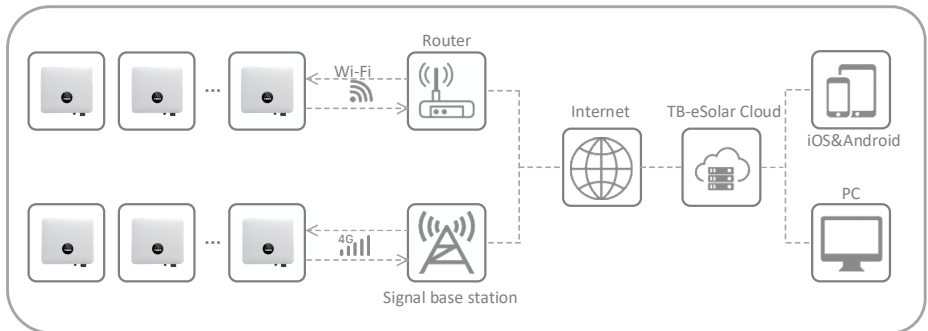


Method 2 every inverter with 4G/WiFi stick, every inverter can connect to internet.

As shown above, we offer a remote monitoring platform called “TB-eSolar cloud”. You can also install the “TB-eSolar APP” on a smart phone using Android or an iOS operating system. You can contact with the TBEA Service for system information, and the user manual for the TB-eSolar Cloud Web or TB-eSolar APP.

6.2 Active power control with Smart meter

The inverter can control active power output via connecting smart meter, following picture is the system connection mode through WiFi stick.

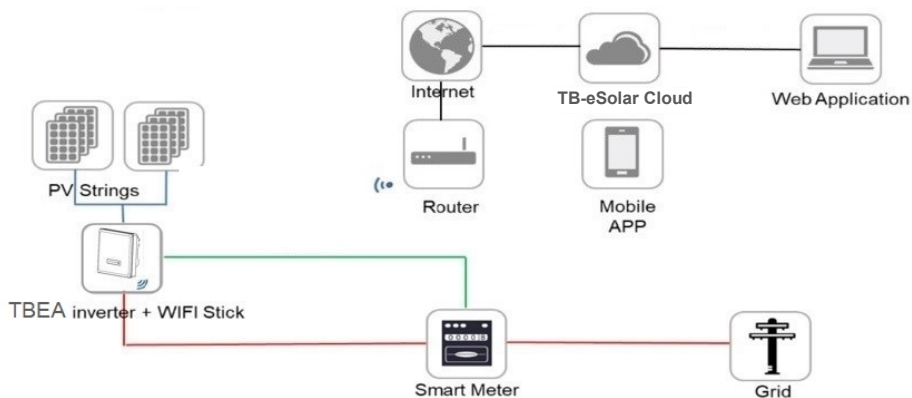

The smart meter should support the MODBUS protocol with a baud rate of 9600 and address set 1. Smart meter as above SDM630-Modbus connecting method and setting baud rate method for modbus please refer to it's user manual.



Possible reason of communication failure due to incorrect connection

- The overall length of the cable from inverter to smart meter is 100m.

The active power limit can be set on "TB-eSolar APP" application, the details can be found in the user manual for the TB-eSolar APP.

6.3 Remote firmware update

TS25-40KTL-A20 series inverters can update the firmware through 4G/ WiFi stick, no need to open the cover for maintenance. For more information, please contact the Service.

6.4 Active power control via demand response enabling device (DRED)



DRMs application description

- Only applicable to AS/NZS4777.2:2015.
- DRM0, DRM5, DRM6, DRM7, DRM8 are available.

The inverter shall detect and initiate a response to all supported demand response commands, demand response modes are described as follows:

Mode	Requirement
DRM 0	Operate the disconnection device
DRM 1	Do not consume power
DRM 2	Do not consume at more than 50% of rated power
DRM 3	Do not consume at more than 75% of rated power AND Source reactive power if capable
DRM 4	Increase power consumption (subject to constraints from other active DRMs)
DRM 5	Do not generate power
DRM 6	Do not generate at more than 50% of rated power
DRM 7	Do not generate at more than 75% of rated power AND Sink reactive power if capable
DRM 8	Increase power generation (subject to constraints from other active DRMs)

If DRMs support is required, the inverter should be used in conjunction with WiFi stick. The Demand Response Enabling Device (DRED) can be connected to the DRED port on Com via RS485 cable. You can contact with the TBEA Service for more information and the user manual for the WiFi stick.

6.5 Communication with the third party device

TEBA inverters can also connect with one third party device instead of RS485 or WiFi stick, the communication protocol is modbus. For more information, please contact the Service.

7 Commissioning

7.1 Electrical check

Carry out the main electrical checks as follows:

1. Check the PE connection with a multimeter: check that the inverter's exposed metal surface has a grounding connection.

WARNING

Danger to life due to the presence of DC-Voltage

Touching the live conductors can lead to lethal electric shocks.

- Only touch the insulation of the PV array cables.
- Do not touch parts of the sub-structure and frame of the PV array which isn't grounded.
- Wear personal protective equipment such as insulating gloves.

2. Check the DC voltage values: make sure that the DC voltage of the strings does not exceed the permitted limits.
3. Check the polarity of the DC voltage: make sure the DC voltage has the correct polarity.
4. Check the PV generator's insulation to ground with a multimeter: make sure that insulation resistance to ground is greater than 1MΩ.

WARNING

Danger to life due to the presence of AC-Voltage

Touching the live conductors can lead to lethal electric shocks.

- Only touch the insulation of the AC cables.
- Wear personal protective equipment such as insulating gloves.

5. Check the grid voltage: check that the grid voltage at the point of connection of the inverter is within the permitted range.

7.2 Mechanical check

Carry out the main mechanical checks to ensure the inverter is waterproof as follows:

1. Make sure the inverter has been correctly mounted with wall bracket.
2. Make sure the cover has been correctly mounted.
3. Make sure the communication cable and AC connector have been correctly wired and tightened.

7.3 Safety code check

Choose suitable safety code according to the location of installation. Please contact with the TBEA Service for the detailed information of TB-eSolar Cloud APP manual, you can find the Safety Code Setting Guide in an event where an installer needs to set the country code manually.



The TEBA inverters comply with local safety code when leaving the factory.

7.4 Start-up

After finishing the electrical and mechanical checks, switch on the miniature circuit-breaker and DC-switch in turn. Once the DC input voltage is sufficiently high and the grid-connection conditions are met, the inverter will start operation automatically. Usually, there are three states during operation:

1. **Waiting:** When the initial voltage of the strings is greater than the minimum DC input voltage but lower than the start-up DC input voltage, the inverter is waiting for sufficient DC input voltage and cannot feed power into the grid.
2. **Checking:** When the initial voltage of the strings exceeds the start-up DC input voltage, the inverter will check feeding conditions at once. If there is anything wrong during checking, the inverter will switch to the "Fault" mode.
3. **Normal:** After checking, the inverter will switch to "Normal" state and feed power into the grid. During periods of low radiation, the inverter may continuously start up and shut down. This is due to insufficient power generated by the PV array.

If this fault occurs often, please call service.




If the inverter is in "Fault" mode, refer to chapter 11 "Troubleshooting".

8 Display

8.1 Overview of the control panel

The inverter is equipped with a display panel, which has 3 LED indicators.

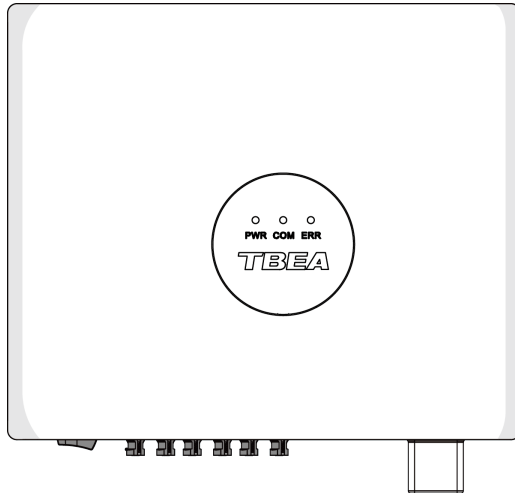

8.2 LED indicators

The three LED indicators from left to right are:

1. PWR power indicator

When the inverter is in the standby self-checking state, the PWR LED flashes. Under normal grid-connected working state, the PWR LED is always on. In "Fault" mode, the PWR LED is off.

2. COM communication indicator

When the inverter communicates with other devices normally, the COM LED flashes. If communication is abnormal or not connected, the COM LED is off.

3. ERR fault indicator

The ERR LED is on when the invert is faulty or when external conditions cannot be grid-connected or when it is working improperly. When there is no fault, the ERR LED is off.

9 Disconnecting the inverter from voltage sources

Before performing any work on the inverter, disconnect it from all voltage sources as described in this section. Always adhere strictly to the given sequence.


1. Disconnect AC circuit breaker and secure against reconnection.
2. Disconnect the DC-switch and secure against reconnection.
3. Use a current probe to ensure that no current is present in the DC cables.

DANGER



Danger to life due to electric shock when touching exposed DC conductors or DC plug contacts if the DC connectors are damaged or loose

The DC connectors can break or become damaged, become free of the DC cables, or no longer be connected correctly if the DC connectors are released and disconnected incorrectly. This can result in the DC conductors or DC plug contacts being exposed. Touching live DC conductors or DC plug connectors will result in death or serious injury due to electric shock.

- Wear insulated gloves and use insulated tools when working on the DC connectors.
 - Ensure that the DC connectors are in perfect condition and that none of the DC conductors or DC plug contacts are exposed.
 - Carefully release and remove the DC connectors as described in the following.
4. Release and remove all DC connectors. Insert a flat-blade screwdriver or an angled screwdriver (blade width: 3.5 mm) into one of the slide slots and pull the DC connectors out downwards. Do not pull on the cable.

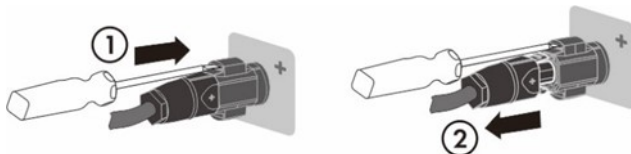

5. Release and disconnect the AC connector. Unscrew the screws of the AC terminals, and then pull out the AC connector.

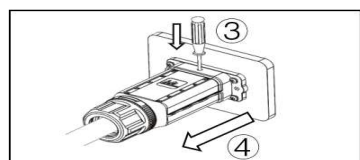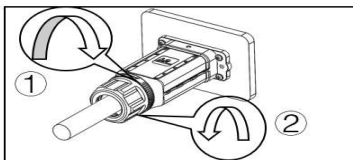

6. Wait until all LEDs and the display have gone out.

10 Technical data

10.1 DC input data

Type	TS25KTL-A20	TS27KTL-A20	TS30KTL-A20
Max. PV modules power(STC)	37500 W	40500 W	45000 W
Max. input voltage ^① / Rated input voltage	1100V/630V		
MPP voltage range ^②	180 - 1000 V		
Full load MPP voltage range ^③	450 V - 850 V		
Initial feed-in voltage	200 V		
Min input voltage	160 V		
Max. DC input current	32A / 32 A / 32A		
I _{sc} PV, absolute max.	48A / 48A / 48A		
Maximum reverse current from the inverter in the system for max. 1 ms	0 A		
Number of MPP trackers	3		
Strings per MPP tracker	2		
Overvoltage category in accordance with IEC60664-1	II		

Type	TS33KTL-A20	TS36KTL-A20	TS40KTL-A20
Max. PV modules power(STC)	49500 W	54000 W	60000 W
Max. input voltage ^① / Rated input voltage	1100V/630V		
MPP voltage range ^②	180 - 1000 V		
Full load MPP voltage range ^③	450 V - 850 V		
Initial feed-in voltage	200 V		
Min input voltage	160 V		
Max. DC input current	32A / 32A / 40A		

Isc PV, absolute max.	48A / 48A / 60A
Maximum reverse current from the inverter in the system for max. 1 ms	0 A
Number of MPP trackers	3
Strings per MPP tracker	2
Overvoltage category in accordance with IEC60664-1	II

- ① The “Max. input voltage” is the maximum DC input voltage that the inverter can withstand. If the input voltage exceeds this value, the inverter may be damaged.
 - ② If the input voltage exceeds the “MPP voltage range”, the inverter will not work properly.
 - ③ The full-load MPP voltage range of the inverter is the value measured under the rated AC voltage.
- If you have any questions, please consult local service personnel.

10.2 AC output data

Type	TS25KTL-A20	TS27KTL-A20	TS30KTL-A20
Rated output power	25000W	27000W	30000W
Max. output apparent power *1	27500VA	29700VA	33000VA
Rated AC Voltage *2	3/N/PE,230/400V		
AC voltage range	180V-305V/312V-528V		
Rated AC Frequency *3	50Hz/60Hz		
Operating range at AC power frequency 50 Hz	45Hz to 55Hz		
Operating range at AC power frequency 60 Hz	55Hz to 65Hz		
Max. continuous output current	39.9A	43.0A	47.8A
Maximum output current under fault conditions	110A		
Maximum output overcurrent protection	63A		


Adjustable displacement power factor	0.80 ind - 0.80 cap
Inrush current (peak and duration)	<13A @250us
Harmonic distortion (THD) at the rated power	< 3%
Night-time power loss	<1 W
Standby power loss	<12 W
Overvoltage category in accordance with IEC60664-1	III

Type	TS33KTL-A20	TS36KTL-A20	TS40KTL-A20
Rated output power	33000W	36000W	40000W
Max. output apparent power *1	36300VA	39600VA	44000VA
Rated AC Voltage *2	3/N/PE , 230/400V		
AC voltage range	180V-305V/312V-528V		
Rated AC Frequency *3	50Hz/60Hz		
Operating range at AC power frequency 50 Hz	45Hz to 55Hz		
Operating range at AC power frequency 60 Hz	55Hz to 65Hz		
Max. continuous output current	52.6A	57.4A	63.8A
Maximum output current under fault conditions	135A		
Maximum output overcurrent protection	100A		
Adjustable displacement power factor	0.80 ind - 0.80 cap		
Inrush current (peak and duration)	<13A @250us		
Harmonic distortion (THD) at the rated power	< 3%		

Night-time power loss	<1 W
Standby power loss	<12 W
Overvoltage category in accordance with IEC60664-1	III

- *1. For European market and AS/NZS4777.2 $S_{max} = 1.0 \times P_n$.
- *2. The AC voltage range depends on the local safety standards and rules.
- *3. The AC frequency range depends on the local safety standards and rules.

10.3 General data

Type	TS25KTL-A20	TS27KTL-A20	TS30KTL-A20
Net weight	31Kg		
Dimensions(L×W×D)	560×533.5×247mm		
Mounting environment	Indoor and Outdoor		
Mounting recommendation	Wall bracket		
Operating temperature range	-25...+60℃		
Max. permissible value for relative humidity (non-condensing)	100%		
Max. operating altitude above mean sea level	3000m		
Ingress protection	IP66 according to IEC60529		
Climatic category	4K4H		
Protection class	I according to IEC 62103		
Topology	Transformerless		
Feed-in phases	3		
Cooling concept	Fan cooling		
Display	LED		
Communication interfaces	 (RS485 / WiFi / LAN / 4G)		
Radio technology	WLAN 802.11 b / g / n		
Radio spectrum	WLAN 2.4 GHz with 2412MHz – 2472MHz band		
Antenna gain	2dB		

● Standard features / ○ optional features

Type	TS33KTL-A20	TS36KTL-A20	TS40KTL-A20
Net weight	32Kg		
Dimensions(L×W×D)	560×533.5×247mm		
Mounting environment	Indoor and Outdoor		
Mounting recommendation	Wall bracket		
Operating temperature range	-25...+60℃		
Max. permissible value for relative humidity (non-condensing)	100%		
Max. operating altitude above mean sea level	3000m		
Ingress protection	IP66 according to IEC60529		
Climatic category	4K4H		
Protection class	I according to IEC 62103		
Topology	Transformerless		
Feed-in phases	3		
Cooling concept	Fan cooling		
Display	LED		
Communication interfaces	●/●/○/○ (RS485 / WiFi / LAN / 4G)		
Radio technology	WLAN 802.11 b / g / n		
Radio spectrum	WLAN 2.4 GHz with 2412MHz – 2472MHz band		
Antenna gain	2dB		

● Standard features / ○ optional features

10.4 Safety regulations

Type	TS25-40KTL-A20Series inverter
Internal overvoltage	Integrated
DC insulation monitoring	Integrated
DC injection monitoring	Integrated
Grid monitoring	Integrated
Residual current monitoring	Integrated
Islanding protection	Integrated (Three-phase monitoring)
EMC immunity	EN61000-6-1 EN61000-6-2
EMC emission	EN61000-6-3 EN61000-6-4
Utility interference	EN61000-3-11, EN61000-3-12

10.5 Tools and torque

Tools and torque required for installation and electrical connections.

Tools, model		Object	Torque
Torque screwdriver, SW10		Screws for wall bracket screws	3N.m
Hexagon screwdriver, T3		Screws for AC terminal	2N.m
Torque screwdriver, PH2 Cross head		Screw for second protective grounding connection	2.5Nm
/		Stick	Hand-tight
RS485 sleeve	Open end of 29	Swivel nut of M28 cable gland	1.6 Nm
RS485 nut	Open end of 25	Swivel nut of M25 cable gland	1.2 Nm
AC connector nut	Open end of 50	Swivel nut of sunclix connector	10 Nm
Wire stripper		Peel cable jackets	/
Crimping tools		Crimp power cables	/
Hammer drill, drill bit of Ø10		Drill holes on the wall	/
Rubber mallet		Hammer wall plugs into holes	/
Cable cutter		Cut power cables	/
Multimeter		Check electrical connection	/
Marker		Mark the positions of drill holes	/
ESD glove		Wear ESD glove when opening the inverter	/
Safety goggle		Wear safety goggle during drilling holes.	/
Anti-dust respirator		Wear anti-dust respirator during drilling holes.	/

11 Troubleshooting

When the PV system does not operate normally, we recommend the following solutions for quick troubleshooting. If an error occurs, the red LED will light up. There will have "Event Messages" display in the monitor tools. The corresponding corrective measures are as follows:

Object	Error code	Corrective measures
Presumable Fault	E33	<ul style="list-style-type: none">• Check the grid frequency and observe how often major fluctuations occur.• If this fault is caused by frequent fluctuations, try to modify the operating parameters after informing the grid operator first.
	E34	<ul style="list-style-type: none">• Check the grid voltage and grid connection on inverter.• Check the grid voltage at the point of connection of inverter.• If the grid voltage is outside the permissible range due to local grid conditions, try to modify the values of the monitored operational limits after informing the electric utility company first.• If the grid voltage lies within the permitted range and this fault still occurs, please call service.
	E35	<ul style="list-style-type: none">• Check the fuse and the triggering of the circuit breaker in the distribution box.• Check the grid voltage, grid usability.• Check the AC cable, grid connection on the inverter.• If this fault is still being shown, contact the service.
	E36	<ul style="list-style-type: none">• Make sure the grounding connection of the inverter is reliable.• Make a visual inspection of all PV cables and modules.• If this fault is still shown, contact the service.
	E37	<ul style="list-style-type: none">• Check the open-circuit voltages of the strings and make sure it is below the maximum DC input voltage of the inverter.• If the input voltage lies within the permitted range and the fault still occurs, please call service.
	E38	<ul style="list-style-type: none">• Check the PV array's insulation to ground and make sure that the insulation resistance to ground is greater than 1 MOhm. Otherwise, make a visual inspection of all PV cables and modules.• Make sure the grounding connection of the inverter is reliable.• If this fault occurs often, contact the service.

Presumable Fault	E40	<ul style="list-style-type: none"> • Check whether the airflow to the heat sink is obstructed. • Check whether the ambient temperature around the inverter is too high.
	E46	<ul style="list-style-type: none"> • Check whether the open circuit voltage of each photovoltaic group is $\geq 1020V$. • If the open circuit voltage of each pv group is less than 995V and this fault still exists, please contact the service personnel.
	E48	<ul style="list-style-type: none"> • Check whether the electric supply is abnormal. • If the electric supply is normal and this fault still exists, please contact the service personnel.
	E56 E57 E58	<ul style="list-style-type: none"> • Disconnect the inverter from the grid and the PV array and reconnect after 3 minutes. • If this fault is still being shown, contact the service.
	E61 E62	<ul style="list-style-type: none"> • Check the DRED device communication or operation.
PE wire connection fault	E65	<ul style="list-style-type: none"> • Check if the ground line is connected with the inverter. • Ensure the grounding connection of the inverter is connected and reliable. • If this fault occurs often, contact TEBA service.
External input signal fault	E69	<ul style="list-style-type: none"> • If NS protection function is not needed, this function maybe enabled by mistake, disable this by APP • If NS protection function is needed, check signal wire connection is right on RJ45's PIN7&PIN8, if connection is right, use multimeter measure RJ45's PIN7&PIN8 power voltage should lie in range of 8~24Vd.c.. • If this fault occurs often, contact TEBA service.
Permanent Fault	E01 E03 E05 E07 E08 E09 E10	<ul style="list-style-type: none"> • Disconnect the inverter from the utility grid and the PV array and reconnect it after LED turn off. • If this fault is still being displayed, contact the service.

Warning code	Warning message
31	PV1 input over voltage
32	PV2 input over voltage
34	PV1 input over current-software
35	PV1 input over current-hardware
36	PV2 input over current-software
37	PV2 input over current-hardware
40	BUS over voltage-software
42	BUS voltage unbalance (for three phase inverter)
44	Grid voltage over instant
45	Output over current-software
46	Output over current-hardware
47	Anti-islanding
150	PV1-SPD Fault
156	Inter Fan abnormal
157	External Fan abnormal
163	GFCI Redundancy check
165	Ground connect warning
166	CPU self-test --register abnormal
167	CPU self-test --RAM abnormal
174	Low Air Temperature

12 Maintenance

Normally, the inverter needs no maintenance or calibration. Regularly inspect the inverter and the cables for visible damage. Disconnect the inverter from all power sources before cleaning. Clean the housing, cover and display with a soft cloth. Ensure the heatsink at the rear of the inverter cover is not covered.

12.1 Cleaning the contacts of the DC-switch

Clean the contacts of the DC-switch once per year. Perform cleaning by cycling the switch to ON/OFF positions 5 times. The DC-switch is located at the lower left of the housing.

12.2 Cleaning the heat sink



CAUTION

Risk injury due to hot heat sink

The heat sink may exceed 70°C during operation.

- Do not touch the heatsink during operation.
- Wait approx. 30 minutes before cleaning until the heatsink has cooled down.

An external fan is installed at the bottom of the inverter. When the fan fails to work normally, the inverter cannot effectively dissipate heat, and the load drops or the machine may even shut down. At this time, the fan needs to be cleaned or replaced.

Clean the heat sink with pressurized air or a soft brush. Do not use aggressive chemicals, cleaning solvents or strong detergents.

For proper function and long service life, ensure free air circulation around the heatsink.

13 Recycling and disposal

Dispose of the packaging and replaced parts according to the rules at the installation site where the device is installed.



Do not dispose of the product together with the household waste but in accordance with the disposal regulations for electronic waste applicable at the installation site.

14 EU Declaration of Conformity

within the scope of the EU directives

- Electromagnetic compatibility 2014/30/EU

(L 96/79-106, March 29, 2014) (EMC).

- Low Voltage Directive 2014/35/EU.(L 96/357-374, March 29, 2014)(LVD).

- Radio Equipment Directive 2014/53/EU (L 153/62-106. May 22. 2014) (RED)



TBEA Xi'an Electric Technology Co., confirms herewith that the inverters described in this document are in compliance with the fundamental requirements and other relevant provisions of the above mentioned directives.

15 Warranty

The factory warranty card is enclosed with the package, please keep well the factory warranty card.

Warranty terms and conditions are available through the Sales Manager.

When the customer needs warranty service during the warranty period, the customer must provide a copy of the invoice, factory warranty card, and ensure the type label of the inverter is legible. If these conditions are not met, TEBA has the right to refuse to provide with the relevant warranty service.

16 Contact

If you have any technical problems concerning our products, please contact TEBA service. We require the following information in order to provide you with the necessary assistance:

- Inverter device type
- Inverter serial number
- Type and number of connected PV modules
- Error code
- Mounting location
- Warranty card

TBEA Xi'an Electric Technology Co., Ltd.

Add: No.70 Shanglinyuan 4th Road, High-tech Zone, Xi'an, China

TBEA